

CONSTRUCTION LEGEND

- ① ADD ACTIVE
- ② ADD COUPLER
- ③ RECONFIGURE ACTIVE
- ④ CHANGE TAP FACEPLATE
- ⑤ CHANGE TAP FACEPLATE
- ⑥ CHANGE TAP FACEPLATE
- ⑦ CHANGE TAP FACEPLATE
- ⑧ RECONFIGURE TAP
- ⑨ USE REVERSE TAP
- ⑩ REMOVE ACTIVE
- ⑪ ADD TAP
- ⑫ CHANGE TAP
- ⑬ REMOVE COUPLER
- ⑭ USE REVERSE TAP
- ⑮ USE REVERSE TAP
- ⑯ RECONFIGURE TAP
- ⑰ TURN ACTIVE AROUND
- ⑱ RECONFIGURE ACTIVE
- ⑲ CHANGE TAP FACEPLATE
- ⑳ CHANGE TAP
- ㉑ RECONFIGURE COUPLER
- ㉒ CHANGE TAP
- ㉓ RECONFIGURE TAP
- ㉔ CHANGE TAP FACEPLATE
- ㉕ CHANGE TAP FACEPLATE
- ㉖ TURN ACTIVE AROUND
- ㉗ RECONFIGURE ACTIVE
- ㉘ CHANGE TAP FACEPLATE
- ㉙ CHANGE TAP
- ㉚ CHANGE TAP
- ㉛ CHANGE TAP FACEPLATE
- ㉜ TURN ACTIVE AROUND
- ㉝ RECONFIGURE ACTIVE
- ㉞ CHANGE TAP FACEPLATE
- ㉟ CHANGE TAP FACEPLATE
- ㊱ RECONFIGURE TAP
- ㊲ USE REVERSE TAP
- ㊳ USE REVERSE TAP
- ㊴ RECONFIGURE TAP
- ㊵ RECONFIGURE COUPLER
- ㊶ RECONFIGURE COUPLER
- ㊷ CHANGE TAP FACEPLATE
- ㊸ CHANGE TAP FACEPLATE
- ㊹ TURN ACTIVE AROUND
- ㊺ RECONFIGURE ACTIVE
- ㊻ USE REVERSE TAP
- ㊼ USE REVERSE TAP
- ㊽ RECONFIGURE TAP
- ㊾ RECONFIGURE TAP
- ㊿ RECONFIGURE COUPLER
- Ⓚ CHANGE TAP FACEPLATE
- Ⓛ CHANGE TAP FACEPLATE
- Ⓜ CHANGE TAP FACEPLATE
- Ⓨ RECONFIGURE COUPLER
- Ⓩ CHANGE TAP
- ⓐ CHANGE TAP
- ⓑ CHANGE TAP
- ⓓ RECONFIGURE COUPLER
- ⓔ CHANGE TAP
- ⓕ ADD TAP
- ⓖ CHANGE TAP
- ⓗ INSTALL POWER SUPPLY
- ⓘ ADD COUPLER
- ⓙ CHANGE TAP FACEPLATE
- ⓚ CHANGE TAP FACEPLATE
- ⓛ CHANGE TAP FACEPLATE
- ⓜ ADD COUPLER
- ⓝ RECONFIGURE ACTIVE
- ⓞ TURN ACTIVE AROUND
- ⓟ CHANGE TAP FACEPLATE
- ⓠ CHANGE TAP FACEPLATE
- ⓡ REMOVE ACTIVE
- ⓢ CHANGE TAP
- ⓣ RECONFIGURE COUPLER
- ⓤ USE REVERSE TAP
- ⓥ RECONFIGURE TAP
- ⓦ CHANGE TAP FACEPLATE
- ⓧ TURN ACTIVE AROUND
- ⓨ REMOVE COUPLER
- ⓩ RECONFIGURE COUPLER
- ⓪ CHANGE TAP FACEPLATE
- ⓫ RECONFIGURE COUPLER
- ⓬ REMOVE COUPLER
- ⓭ CHANGE TAP FACEPLATE
- ⓮ CHANGE TAP FACEPLATE
- ⓯ CHANGE TAP
- ⓰ OVERLASH CABLE
- ⓱ OVERLASH CABLE
- ⓲ OVERLASH CABLE
- ⓳ OVERLASH CABLE
- ⓴ OVERLASH CABLE
- ⓵ OVERLASH CABLE
- ⓶ OVERLASH CABLE
- ⓷ OVERLASH CABLE
- ⓸ OVERLASH CABLE



SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	CABLE LINETYPES		AMPLIFIER DATA		NPG CABLE, INC.	MAP NO: NODE_LH-L3-02
X	POWER POLE	←	ANCHOR	⊠	PEDESTAL(SIZES A,B,C,D)	②	2 WAY TAP	⊠	END OF LINES	—	CABLE	1	AMP ID		
⊠	POWER POLE W/TRANS	→	PLACE CATV ANCHOR	⊠	VAULT(SIZES A,B,C,D)	④	4 WAY TAP	⊠	SPLICE-BLOCK/STRAIGHT	.412" P3	1.00" P3	2	FOOTAGE	STATE: ARIZONA	
⊠	JOINT POLE	↓	SIDEWALK ANCHOR	○	SDU CT A/U	⑧	8 WAY TAP	⊠	POWER INSERTER	.500" P3	.500" MC2	3	RET PAD	DWG DATE: 07/31/06	
⊠	JOINT POLE W/TRANS	↗	OVERHEAD GUY	▽	COM CT A/U	②	2 WAY SPLITTER	⊠	FIBER FUSION SPLICE	.625" P3	.750" MC2	4	INT EQ		
○	TELCO POLE	↔	POLE TO POLE GUY	⊠	MDU CT	③	3 WAY SPLITTER	⊠	FIBER MECH SPLICE	.750" P3	CABLE FOOTAGE	5	INT EQ		
●	CATV POLE	↔	ROCK GUY	⊠	ADDRESS UNITS	③	DIRECTIONAL COUPLER	⊠	FIBER OPTIC RECEIVER	.875" P3	FIBER ID	6	INT EQ		
⊠	STEEL POLE	↔	TREE GUY	⊠	AER ROUTING	⊠	LINE EQUALIZER	⊠	TRUNK AMPLIFIER	---	---	7	INT EQ		
⊠	CONCRETE POLE	↔	BUILDING GUY	⊠	UND ROUTING	⊠	FIBER STORAGE	⊠	TRUNK AMP W/BROGR	---	---	8	INT EQ		
												9	INT EQ		
												10	INT EQ		
												11	INT EQ		
												12	INT EQ		
												13	INT EQ		
												14	INT EQ		
												15	INT EQ		
												16	INT EQ		
												17	INT EQ		
												18	INT EQ		
												19	INT EQ		
												20	INT EQ		
												21	INT EQ		
												22	INT EQ		
												23	INT EQ		
												24	INT EQ		
												25	INT EQ		
												26	INT EQ		